


DRY TYPE TRANSFORMERS MOUNTING INSTRUCTIONS

1. UNSCREW THE BOLTS AS REQUIRED.
 2. INSERT RAIN SHIELD UNDER TOP COVER.
 3. SECURE RAIN SHIELD BY FASTENING THE BOLTS.
- NOTE: BOLTS SUPPLIED WITH SHIELD KIT.

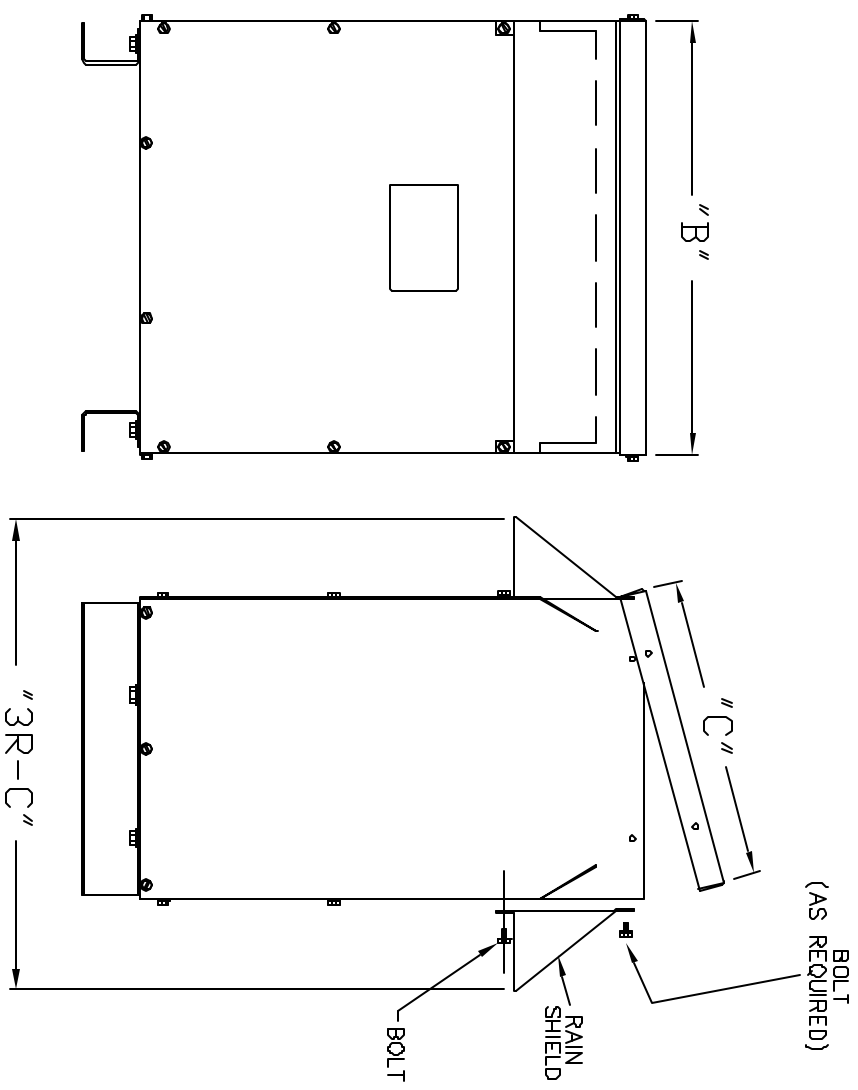

WEATHERSHIELD TO MAKE ENCLOSURES NEMA 3R RATED			
WEATHERSHIELD	ENCLOSURE WIDTH "B"	ENCLOSURE DEPTH "C"	DEPTH "3R-C" (WITH WEATHER-SHIELD)
SINGLE PHASE			
421-7008-015	15.00"	14.00"	21.00"
421-7008-025	15.00"	15.00"	22.00"
421-7008-037	17.00"	17.00"	24.00"
421-7008-050	20.00"	18.00"	25.00"
421-7008-075	22.00"	20.00"	27.00"
421-7008-100	22.00"	22.00"	30.00"
3-PHASE			
423-7008-015	17.00"	14.00"	21.00"
423-7008-030	19.00"	16.00"	23.00"
423-7008-045	22.00"	17.00"	24.00"
423-7008-075	25.00"	18.50"	25.50"
423-7008-112	27.00"	21.00"	28.00"
423-7008-150	29.00"	23.00"	31.00"
223-7008-225	33.00"	26.00"	34.00"
223-7008-300	35.00"	30.00"	38.00"
223-7008-500	48.00"	33.00"	43.50"

INSTRUCTION SHEET
RAIN SHIELD INSTALLATION

DWG. NO. 004-0966-000

REV.